


Work Order #: 9244-1    Tag #1: psv0013    Tag #2:    Customer: coffeyville    Location:    Customer ID:     
 Manufacturer: cons    Model: 1920-30qt    S/N: tr49978    Size: 6    Technicians: mercer    Pre Test Date: (MM-DD-YYYY) 10-29-2009  
 Set Press: 50    B.D.:    Capacity: 14055    Lift:    Final Test Date: (MM-DD-YYYY) 11-3-2009  
 Cold Set:    Temp:    ASME Code:  V  UV  NA    Other:    Back Pressure:   

**Start New Test**

**Continue Existing Test**



Filename: C:\Test Data\Pre\coffeyville\_9244-1\_psv0013\_10-29-2009\_6.Pre  
 (Customer\_Work Order \_ Date \_ Tag Number \_ Size)

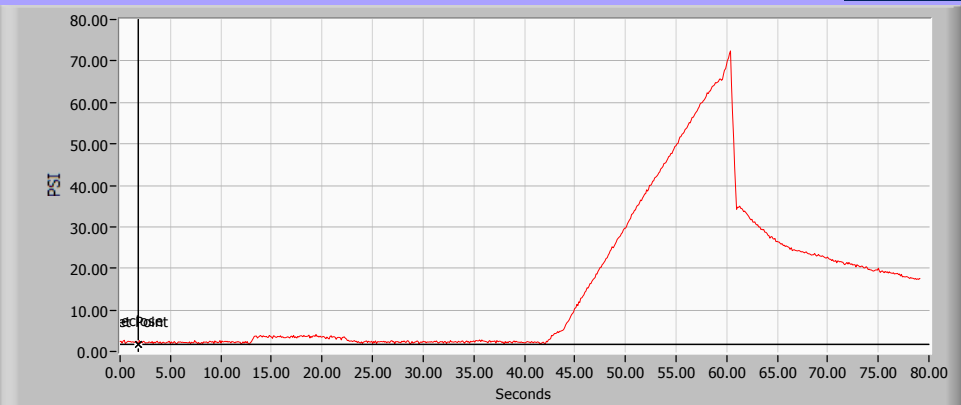


**Start Pre-Test**    **STOP**



Pressure  
0.00  
Pre-Test Date  
10-29-2009

Cursors:			
		X	Y
<input type="checkbox"/>	Set Point	Seconds	PSI
<input type="checkbox"/>	Plot 0	1.80	1.75
<input type="checkbox"/>	Reclose	Seconds	PSI
<input type="checkbox"/>	Plot 0	1.80	1.75

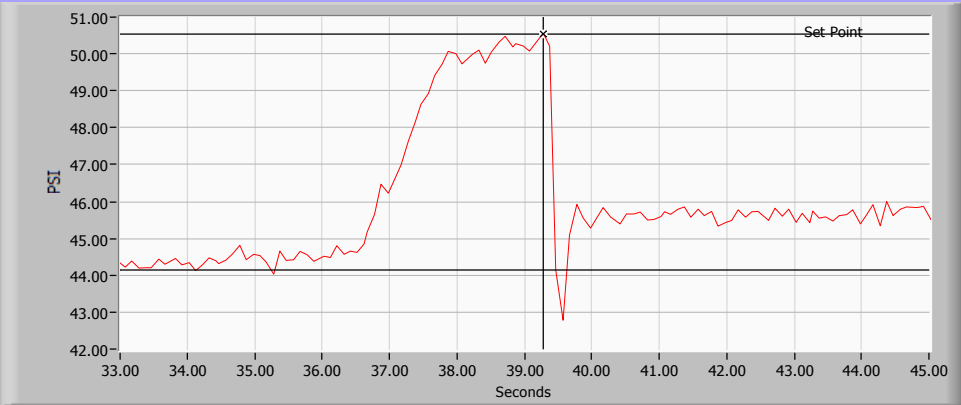

**Start Final Test**



Pressure 2  
0.00  
Final Test Date  
11-3-2009

Cursors:			
		X	Y
<input type="checkbox"/>	Set Point	Seconds	PSI
<input type="checkbox"/>	Plot 0	39.28	50.56
<input type="checkbox"/>	Reclose	Seconds	PSI
<input type="checkbox"/>	Plot 0	19.47	44.14

DAQ    Calibration